

## Startup Screen

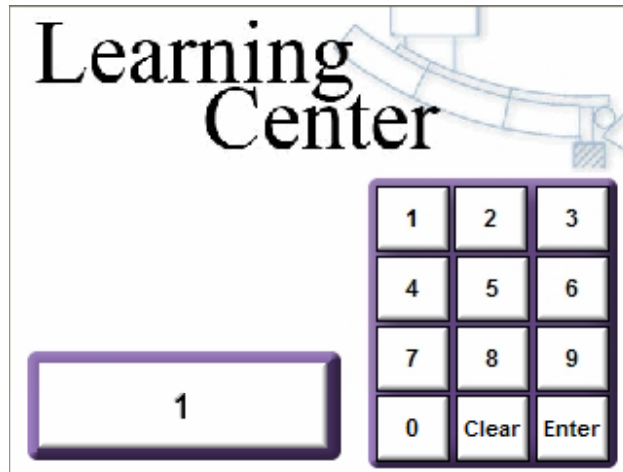


figure 1

**Unlock Code:** Please enter your 5-digit pass code and press enter to startup the Audio/Video system. You should see an "\*" in the large box on the left as you enter your pass code. If you enter in the wrong code, the warning box will be shown as in figure 2. If you enter the correct pass code into the system, the system will startup and the screen displayed in figure 3 will come on the screen.

### Close

Press the "X" button to close the screen.

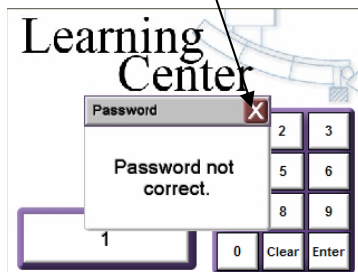


figure 2

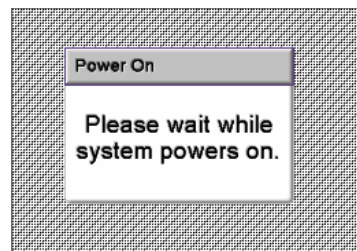


figure 3

## Local Presentation—Main Screen

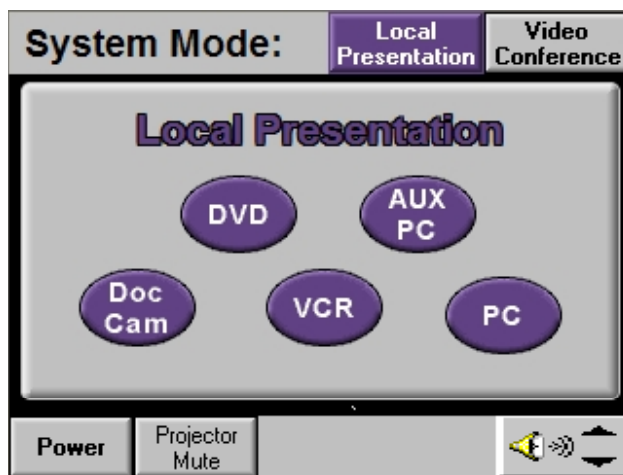


figure 4

**Local Presentation:** The main screen for the audio/video system in local presentation mode will be displayed as in figure 4. The Local Presentation will be in purple at the top of the screen when you are in this mode. This mode is to present sources to the local audience only. Please select the sources that you would like to send to the projector from this screen by pressing with your finger on the following buttons:

## Local Presentation—Doc Cam

Doc Cam  
Opens the Doc Cam screen as shown in figure 5.1

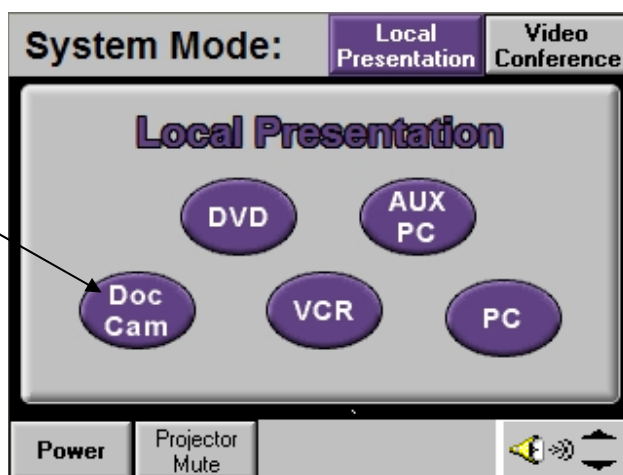


figure 5

## Local Presentation—Doc Cam (Cont'd)

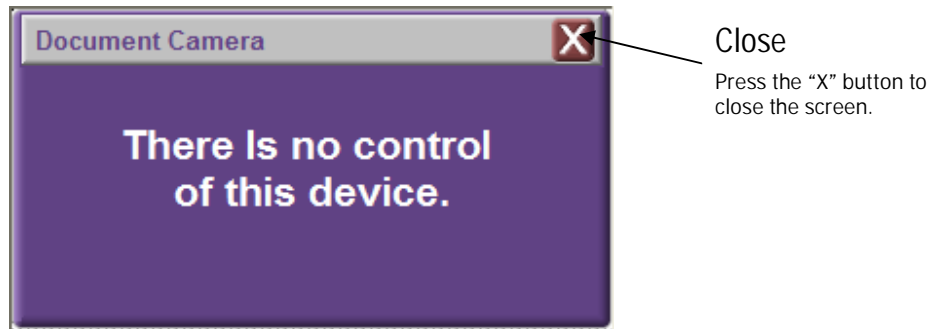


figure 5.1

**Document Camera:** When you select the document camera (doc cam) source. The document camera image will be sent to the local projector and the touch panel screen will look like figure 5.1. There is no control of the document camera from the touch panel. Please use the local controls on the document camera.

## Local Presentation—DVD

### DVD

Opens the VCR transport screen as shown in figure 7.

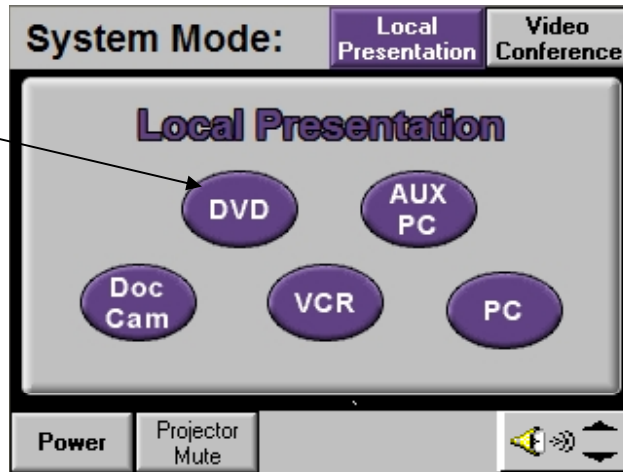


figure 6

### Stop

Stops the DVD inserted in the DVD drawer.

### Play

Plays the DVD inserted in the DVD drawer.

### Pause

Pauses the playback of the DVD inserted in the DVD drawer.

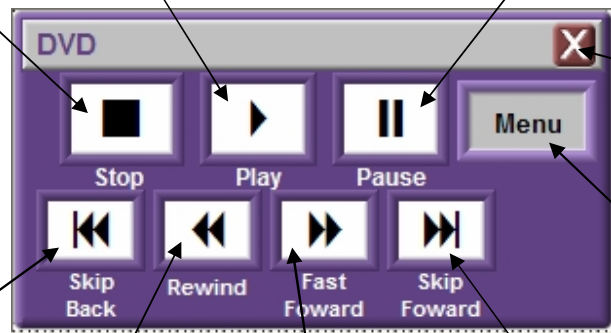


figure 7

### Close

Press the "X" button to close the screen.

### Menu

Takes you to the menu screen as shown in figure 9.

### Skip Back

Skips to the previous chapter of the DVD.

### Rewind

Rewinds the DVD when it is in playback. Pressing this button in turn will control the speed.

### Fast Forward

Forwards the DVD when it is in playback. Pressing this button in turn will control the speed.


### Skip Forward

Skips to the next chapter of the DVD.

### DVD-Transport:

The DVD transport screen is shown in figure 7. You can control the transport features of the DVD from this screen. The transport features are shown in figure 7.

## Local Presentation—DVD (Cont'd)

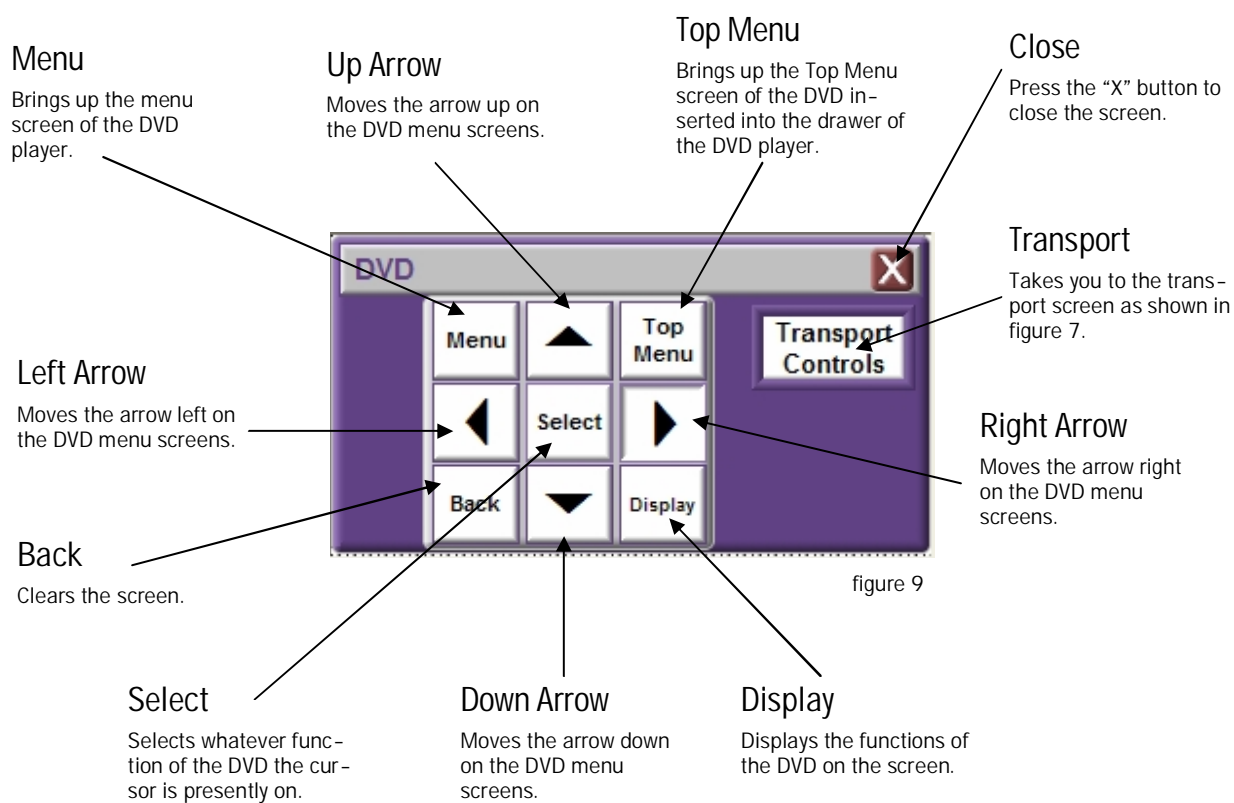

**DVD-Menu:** The DVD menu screen is shown in figure 9. You can control the menu features of the DVD player from this screen. The menu features are shown in figure 9.

## Local Presentation—VCR

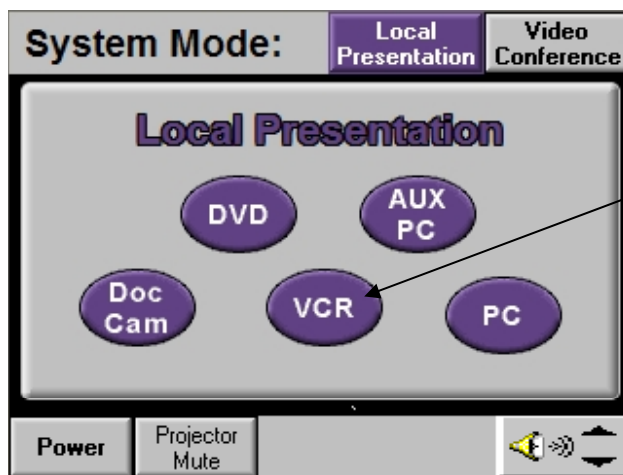


figure 10

VCR

Opens the VCR transport screen as shown in figure 11,

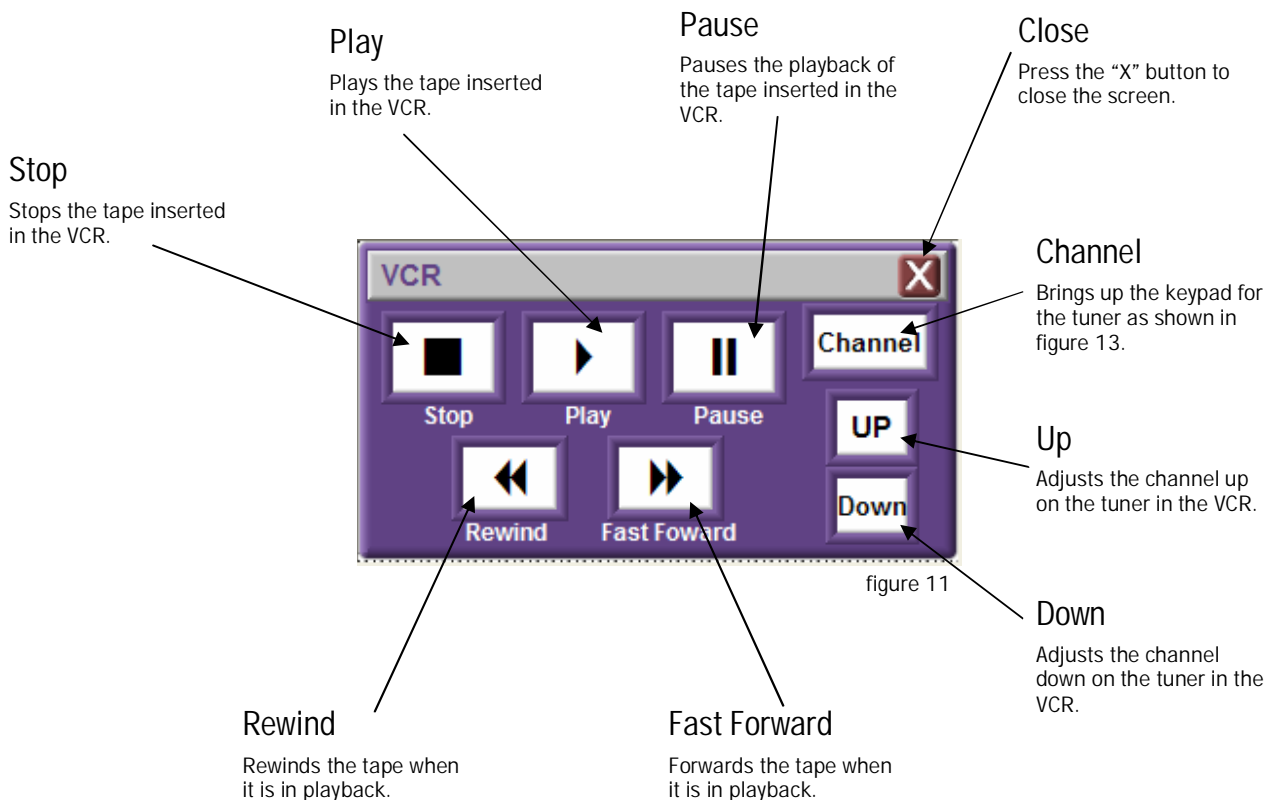


figure 11

Play

Plays the tape inserted in the VCR.

Pause

Pauses the playback of the tape inserted in the VCR.

Close

Press the "X" button to close the screen.

Stop

Stops the tape inserted in the VCR.

Channel

Brings up the keypad for the tuner as shown in figure 13.

Up

Adjusts the channel up on the tuner in the VCR.

Down

Adjusts the channel down on the tuner in the VCR.

Rewind

Rewinds the tape when it is in playback.

Fast Forward

Forwards the tape when it is in playback.

**VCR-Transport:** The VCR transport screen is shown in figure 11. You can control the features of the VCR from this screen. The transport features are shown in figure 11.

## Local Presentation—VCR (Cont'd)

### Keypad

Enter in the number of the channel that you would like to view.

### Close

Press the "X" button to close the screen.

### Transport

Takes you to the transport screen as shown in figure 11.


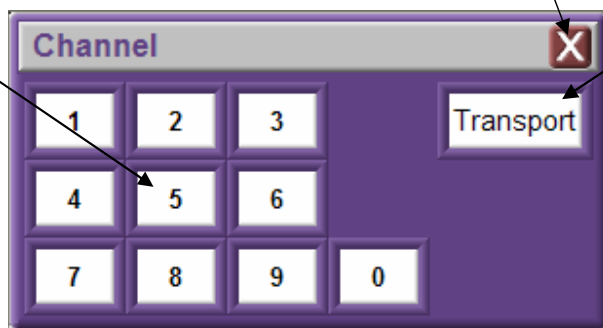


figure 13

### VCR-Channel:

The VCR channel screen is shown in figure 13. You can control the features of the VCR from this screen. The channel features are shown in figure 13.

## Local Presentation—Aux PC

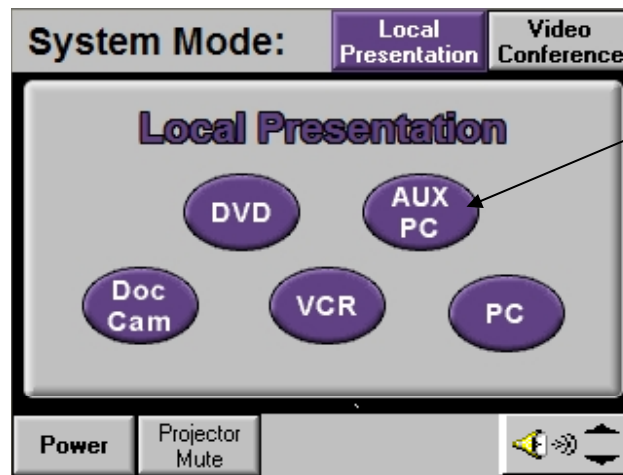

Aux PC  
Opens the Auxiliary PC screen as shown in figure 15,

figure 14

**Aux-PC:** When you select the Auxiliary PC (AUX PC) source. The auxiliary PC image will be sent to the local projector and the touch panel screen will look like figure 15. There is no control of the auxiliary PC from the touch panel. Please use the local controls on the auxiliary PC.

**Close**  
Press the "X" button to close the screen.


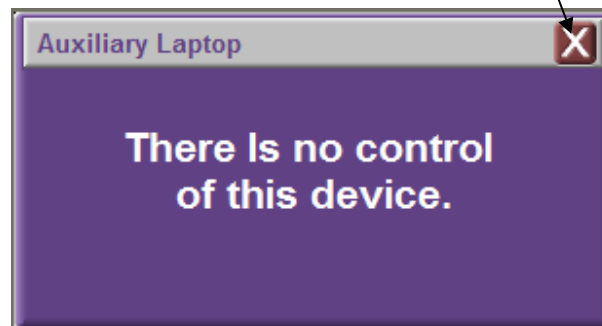


figure 15

## Local Presentation—PC

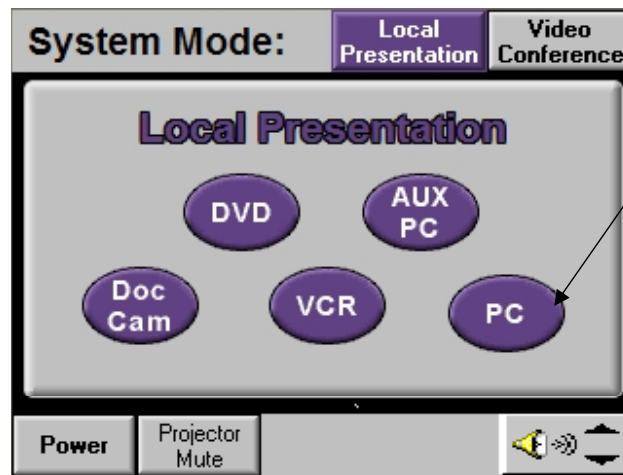

PC  
Opens the PC screen as shown in figure 17,

figure 16

PC: When you select the PC source. The PC image will be sent to the local projector and the touch panel screen will look like figure 17. There is no control of the PC from the touch panel. Please use the local controls on the PC.

Close  
Press the "X" button to close the screen.


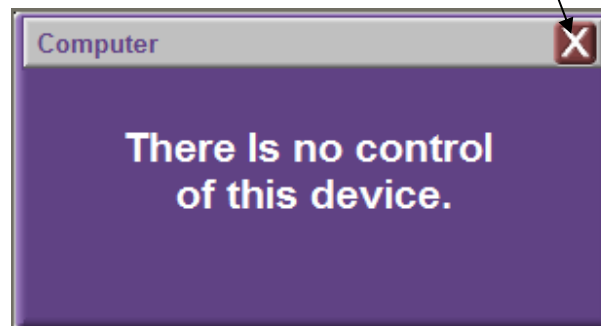


figure 17


## Local Presentation—Volume

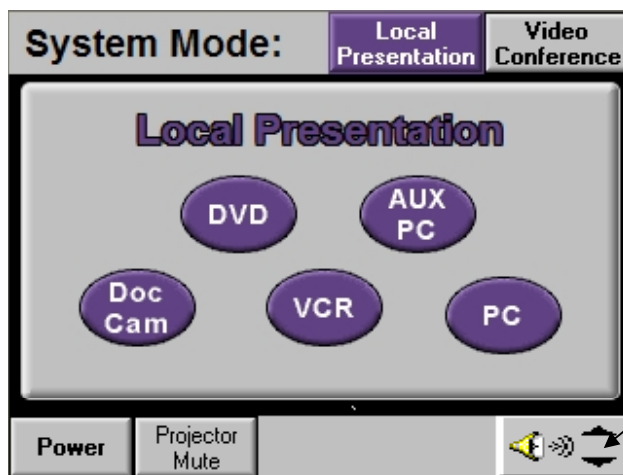

**Volume**  
Opens the Volume screen as shown in figure 19,

figure 18

**Volume:** Pressing the volume button will display the volume control window as shown in figure 19.

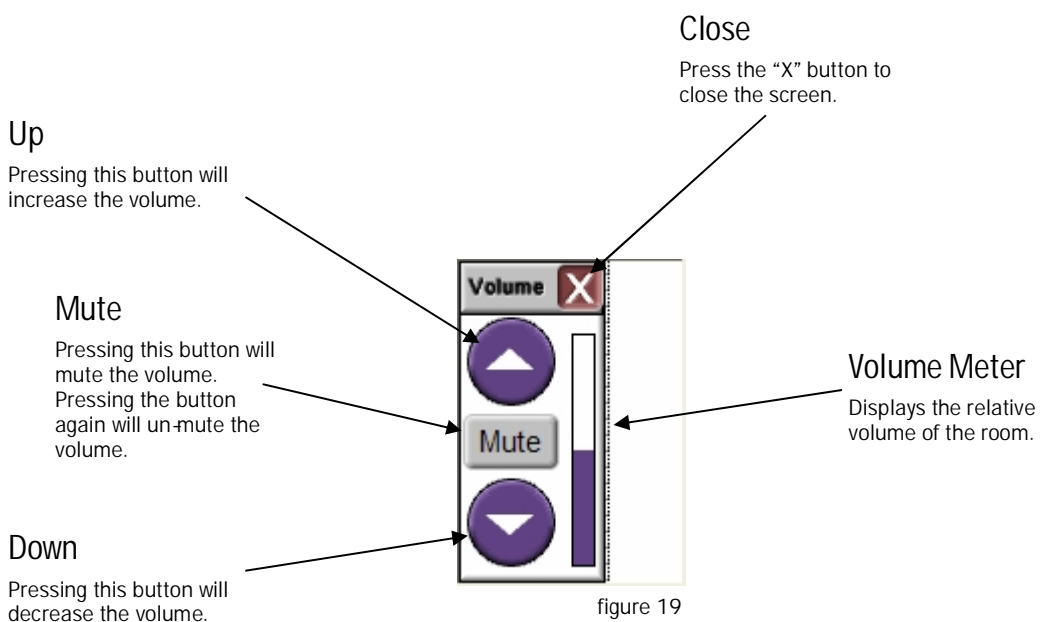

**Up**  
Pressing this button will increase the volume.

**Mute**  
Pressing this button will mute the volume. Pressing the button again will un-mute the volume.

**Down**  
Pressing this button will decrease the volume.

**Close**  
Press the "X" button to close the screen.

**Volume Meter**  
Displays the relative volume of the room.

figure 19

## Local Presentation—Projector Mute

### Projector Mute

Mutes the video shown on the projector. Pressing the button again will un-mute the projector.

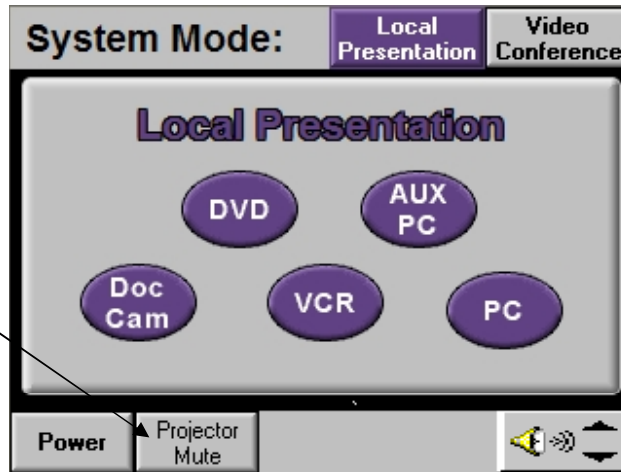


figure 20

**Projector Mute:** Pressing this button will mute the video displayed on the projector. Pressing the button again will un-mute the video on the projector.

## Local Presentation—Power

### Power

Pressing the power button brings up the verification screen as shown in figure 21.

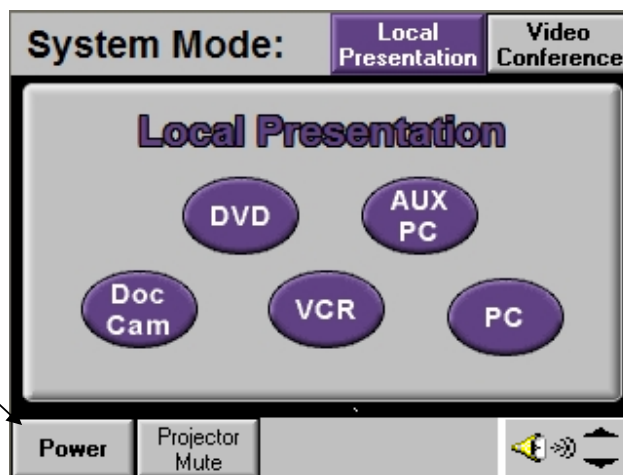



figure 21

**Power:** Pressing the Power button will display the verification window as shown in figure 22.

## Local Presentation—Power (Cont'd)

### Yes

Pressing this button will power down the system and the window as shown in figure 23 will be displayed for a delayed period while the projector bulb cools.

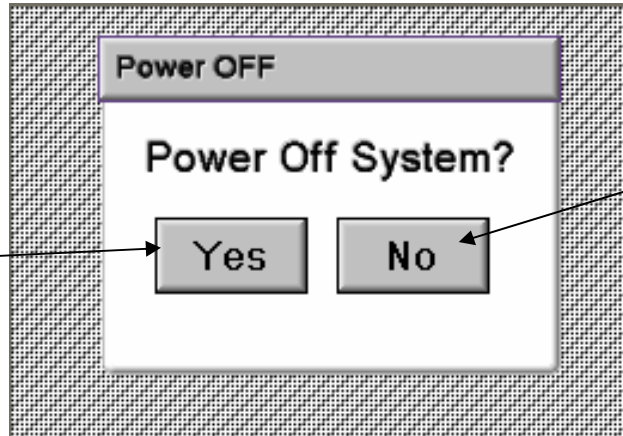

### No

Pressing this button will return you to the previous screen.

figure 22

**Power Verification:** Pressing yes will power down the audio/video system. Pressing no will return to the previous screen.

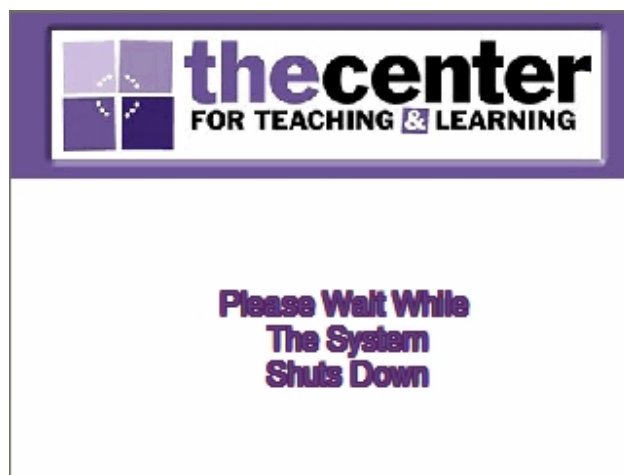


figure 23